

## REAR WHEEL/SUSPENSION

### Driven flange bearing removal

Remove the driven flange bearing and collar.




### Wheel bearing removal

Install the bearing remover head into the bearing.  
From the opposite side install the bearing remover shaft  
and drive the bearing out of the wheel hub.

#### TOOLS:

Bearing remover head, 12 mm    07746 - 0050300  
Bearing remover shaft            07746 - 0050100

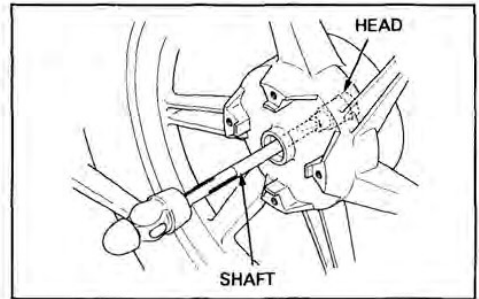

Remove the distance collar and drive out the other bearing.

