

Remove the snap ring using the special tool.

**TOOL:**

**Snap ring pliers**


**07914 – SA50001**



Remove the following:

- push rod assembly
- master piston assembly
- spring

Check the spring and replace if necessary.

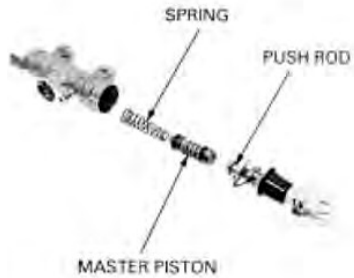

**INSPECTION**


Check the boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for scoring, scratches or other damage.

Replace if necessary.

**NOTE:**

Replace the piston assembly and spring as a set if damaged.

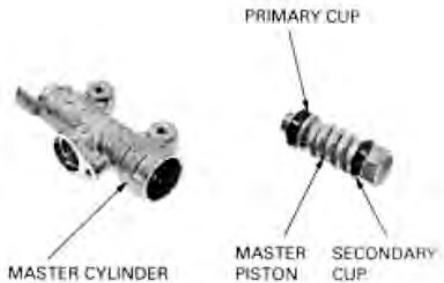

Measure the master cylinder bore I.D.

**SERVICE LIMIT: 12.755 mm (0.5022 in)**

Measure the master piston O.D.

**SERVICE LIMIT: 12.645 mm (0.4978 in)**

