

Place a shop rag under the caliper to cushion the piston when it is expelled.
Use the air in short spurts.

⚠ WARNING

Do not bring the air nozzle too close to the inlet or the pistons may be forced out with excessive force that could cause injury.



Push the dust and piston seals in and lift them out.

Clean the seal groove with clean brake fluid.

CAUTION:

Be careful not to damage the piston sliding surface.

**INSPECTION**

Check the caliper pistons for scoring or other damage.

Measure the caliper piston O.D.

SERVICE LIMIT: 25.300 mm (0.9960 in)

Check the caliper cylinder bores for scoring or other damage.

Measure the caliper cylinder I.D.

SERVICE LIMIT: 25.400 mm (25.405 in)

