


LIGHTS/METERS/SWITCHES


REAR TURN SIGNAL LIGHT

Turn the bulb socket counterclockwise and remove it.
Remove the turn signal bulb and replace it with a new one.

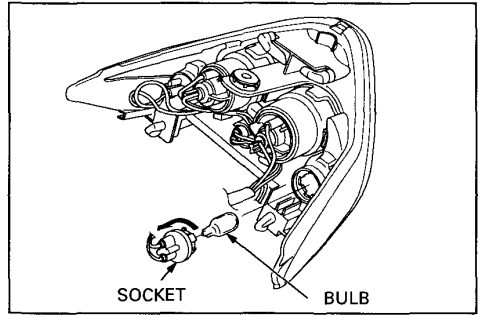

TAIL/BRAKE LIGHT

Turn the bulb socket counterclockwise and remove it.
While pushing in, turn the bulb counterclockwise to remove it.
Remove the tail/brake light bulb and replace it with a new one.

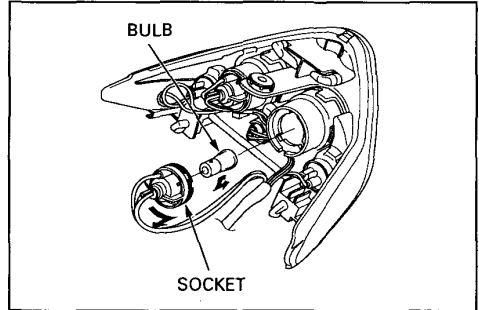

LICENSE LIGHT

Turn the bulb socket counterclockwise and remove it.
Remove the bulb and replace it with a new one.

Installation is in the reverse order of removal.

