

COOLANT TEMPERATURE GAUGE/ THERMOSENSOR

SYSTEM INSPECTION

Remove the fuel tank (page 5-3).

Disconnect the *thermosensor connector* and ground the connector terminal to the body ground.



Turn the ignition switch ON and check the coolant temperature gauge needle. The needle should move to "H".

CAUTION:

Immediately turn the ignition switch OFF when the needle move to "H" (hot) to prevent the gauge from damaging.

- If the needle moves, check the thermosensor.
- If the needle does not move, check for open circuit in Green/Blue wire. If the Green/Blue wire is OK, replace the coolant temperature gauge.

