


Instruments *(Continued)*

Display Setting

Following items to change sequentially.

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Setting of HISS indicator
- **E, II E type only** Changing of speed and mileage unit
- Changing of fuel mileage meter unit

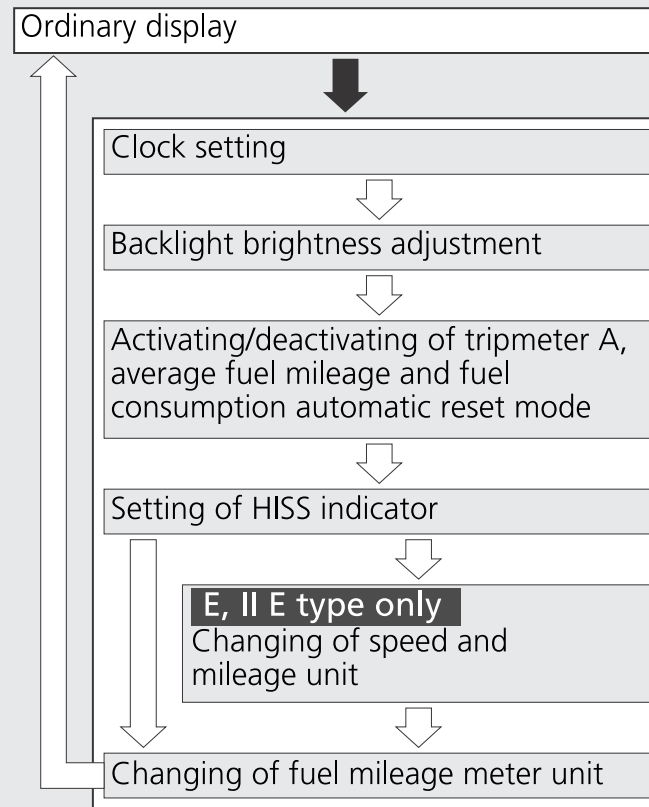

➡ Press and hold SEL button and SET button

➡ Press SET button