


## Initial Display

When the ignition switch is turned ON, the multi-function display (1) and coolant temperature meter (2) will temporarily show all the modes and digital segments. Thereafter, the speedometer (3) will show from 290 km/h to 0 km/h (E type only: From 180 mph to 0 mph in mph) so that you can make sure the liquid crystal display is functioning properly.

The unit "mph" (4) will be displayed only for E type.

Digital clock (5), tripmeter (6) and fuel indicator (7) will reset if the battery is disconnected.

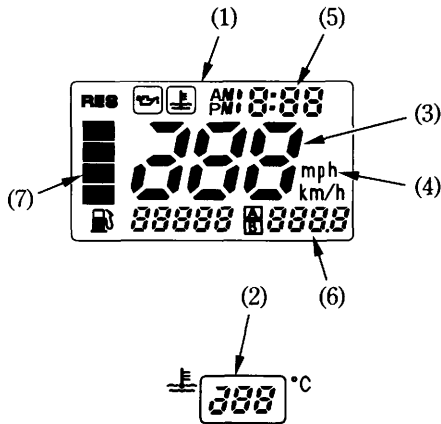

- (1) Multi-function display
- (2) Coolant temperature meter
- (3) Speedometer
- (4) "mph"
- (5) Digital clock
- (6) Tripmeter
- (7) Fuel indicator