

INNER PANEL


The right and left inner panels can be removed in the same manner.

Removal:

1. Remove the bolt A (1) and bolt B (2).
2. Remove the grommet A (3) from the hook A (4).
3. Remove the hook B (5) from the grommet B (6).
4. Remove the hook C (7) from the fuel tank (8).
5. Remove the hook D (9) from the slot (10).

Installation:

- Installation can be done in the reverse order of removal.

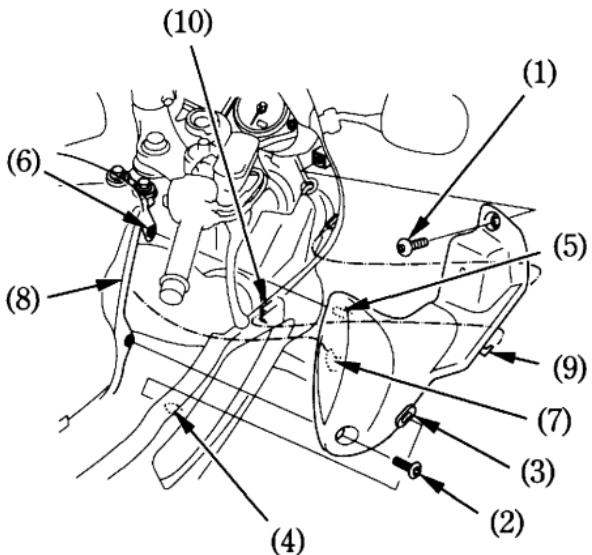

- | | |
|---------------|---------------|
| (1) Bolt A | (6) Grommet B |
| (2) Bolt B | (7) Hook C |
| (3) Grommet A | (8) Fuel tank |
| (4) Hook A | (9) Hook D |
| (5) Hook B | (10) Slot |