FREQUENCY WHICHEVER →											
FREQUENCY		COMES		ODOMETER READING [NOTE (1)]							
		FIRST	× 1.000 km	1	6	12	18	24	30	36	REFER
1		I	× 1.000 mi	0.6	4	8	12	16	20	24	TO
lт	EM	NOTE	MONTH		6	12	18	24	30	36	PAGE
*	FUEL LINE					I		I		I	
*	THROTTLE OPERATION					I		I		I	98
*	AIR CLEANER	NOTE (2)					R	Ĺ		R_	-
	SPARK PLUGS			EVERY 12,000 km (8,000 mi) I,						93	
1				EVERY 24,000 km (16,000 mi) R							
*	VALVE CLEARANCE				ļ			I			
	ENGINE OIL			R		R		R		R	89
	ENGINE OIL FILTER			R		R		R		R	90
*	ENGINE IDLE SPEED		ļ	I	I_	\sqcup	L	I	I	I	99
	RADIATOR COOLANT	NOTE (3)				I	L_	I		R	39
*	COOLING SYSTEM					I		I	L_	I	
*	SECONDARY AIR SUPPLY SYSTEM					<u> </u>		I	L	I	