


## Coolant Temperature Meter

 
The coolant temperature meter (1) shows coolant temperature digitally.

### Temperature Display

|                        |  |
|------------------------|--|
| Below 34°C             | “— —” is displayed.                      |
| Between 35°C and 132°C | Actual coolant temperature is indicated. |
| Above 132°C            | The display will remain “132°C”.         |

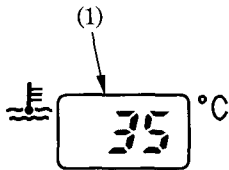

(1) Coolant temperature meter




## Overheating Message

When the coolant temperature reaches 122°C, the display begins to flash. At the same time, the red malfunction indicator (2) lights and the coolant temperature indicator (3) flashes.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 39 – 40 and do not ride the motorcycle until the problem has been corrected.

### NOTICE

Exceeding maximum running temperature may cause serious engine damage.

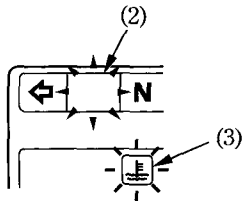

(2) Malfunction indicator

(3) Coolant temperature indicator