



## Battery Removal

The battery (5) is in the battery box below the seat.

1. Remove the seat (page 60 ).
2. Remove the clips (1) and open the battery cover (2).
3. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
4. Pull out the battery (5) from the battery box.

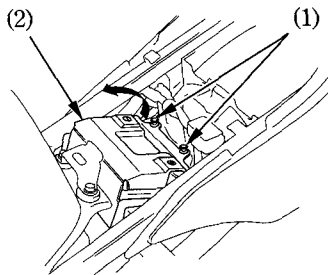

- (1) Clips  
(2) Battery cover

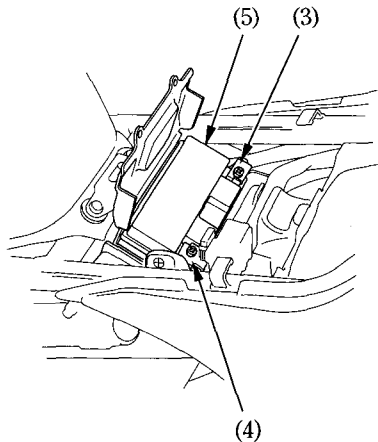

- (3) Negative (-) terminal lead  
(4) Positive (+) terminal lead  
(5) Battery