

Fuel indicator

Lights when there is only few fuel left in the tank. Thereafter, the fuel segment (1) will flash in sequence according to the distance traveled. When the fuel indicator (2) lights, fuel will be low and you should refill the tank as soon as possible.


When fuel indicator lights, the amount of fuel left in the tank with the vehicle set upright is approximately:

3.5 ℓ (0.92 US gal , 0.77 Imp gal)

After refueling, the fuel indicator will go OFF only when all of the following conditions are met:

- More than 90 seconds have elapsed after the ignition switch was turned ON.
- The engine is running.
- The side stand is raised.
- The amount of fuel in the tank is more than 3.5 ℓ (0.92 US gal , 0.77 Imp gal).

Fuel indicator will reset if the battery is disconnected.

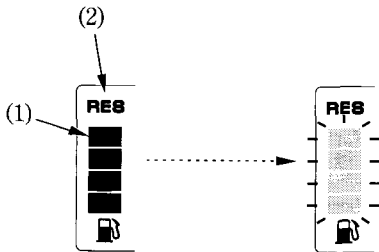

- (1) Fuel segment
(2) Fuel indicator