

## INNER PANEL


The right and left inner panels can be removed in the same manner.

### Removal:

1. Remove the bolt A (1) and bolt B (2).
2. Remove the grommet A (3) from the hook A (4).
3. Remove the hook B (5) from the grommet B (6).
4. Remove the hook C (7) from the fuel tank (8).
5. Remove the hook D (9) from the slot (10).

### Installation:

- Installation can be done in the reverse order of removal.

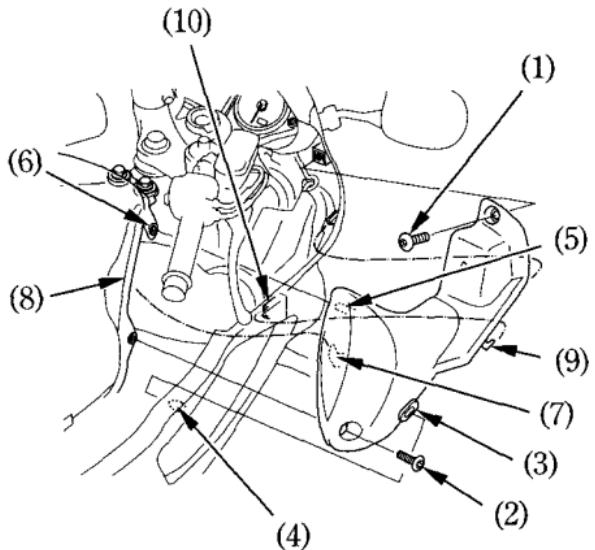

- |               |               |
|---------------|---------------|
| (1) Bolt A    | (6) Grommet B |
| (2) Bolt B    | (7) Hook C    |
| (3) Grommet A | (8) Fuel tank |
| (4) Hook A    | (9) Hook D    |
| (5) Hook B    | (10) Slot     |