	FREQUENCY		WHICHEVER →		ODOMETER READING [NOTE (1)]							
		COMES		ODOMETER READING [NOTE (I)]								
l			FIRST	\times 1,000 km	1	6	12	18	24	30	36	REFER
1			↓	imes 1,000 mi	0.6	4	8	12	16	20	24	TO
IT	<u>EM</u>		NOTE	MONTH		6	12	18	24	30	36	PAGE
*	FUEL LINE						I		Ī		I	
*	THROTTLE OPERATION						Ι		Ī	_	I	94
*	AIR CLEANER		NOTE (2)					R		-	R	
	SPARK PLUGS				EVERY 12,000 km (8,000 mi) I, 89							
Ĺ.					EVERY 24,000 km (16,000 mi) R							
*	VALVE CLEARANCE								I		-	_
Ĺ	ENGINE OIL				R		R		R		R	83
	ENGINE OIL FILTER				R		R		R	-	R	86
*	ENGINE IDLE SPEED				I	I	I	I	I	I	Í	95
[RADIATOR COOLANT		NOTE (3)				I		I		R	34
*	COOLING SYSTEM						I		I		I	_
*	SECONDARY AIR SUPPLY SY	YSTEM					I		I	_	Ī	