



Removal:

The battery (5) is in the battery box below the seat.

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 55).
3. Remove the clips (1) and open the battery cover (2).
4. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
5. Pull out the battery (5) from the battery box.

Installation:

1. Reinstall in the reverse order of removal.
Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

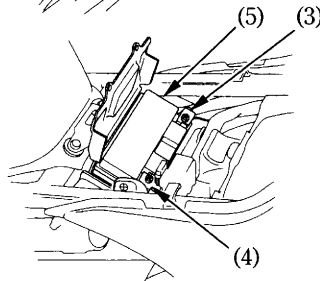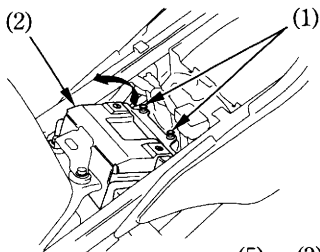

- (1) Clips
- (2) Battery cover
- (3) Negative (-) terminal lead
- (4) Positive (+) terminal lead
- (5) Battery