

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓	ODOMETER READING [NOTE (1)]							REFER TO PAGE	
			x 1,000 km	1	6	12	18	24	30		36
		x 1,000 mi	0.6	4	8	12	16	20	24		
		EVERY	MONTH		6	12	18	24	30	36	
DRIVE CHAIN			I, L, EVERY 1,000 km (600 mi)							138	
BRAKE FLUID	(NOTE 4)			I	I	I	I	I	I	I	146
BRAKE PAD WEAR				I	I	I	I	I	I	I	148
BRAKE SYSTEM			I		I		I		I		146-148
* BRAKE LIGHT SWITCH					I		I		I		
* HEADLIGHT AIM					I		I		I		
CLUTCH SYSTEM			I	I	I	I	I	I	I	I	132
SIDE STAND					I		I		I		152
* SUSPENSION					I		I		I		150
* NUTS, BOLTS, FASTENERS			I		I		I		I		
** WHEELS/TIRES					I		I		I		
** STEERING HEAD BEARINGS			I		I		I		I		

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. For higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in dusty areas.
3. Replace every 36,000 km (24,000 mile) or every 2 year whichever comes first.
4. Replace every 18,000 km (12,000 mile) or every 2 year whichever comes first.