

SPARK PLUGS

(Refer to the maintenance precautions on page 62).


Recommended plugs:

Standard:


CR9EH9 (NGK) or

U27FER9 (NIPPONDENSO)

1. Remove the right and left maintenance lids (1) (page 40) to remove the spark plugs.
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases.
Remove the spark plugs using the spark plug wrench (2) furnished in the tool kit.

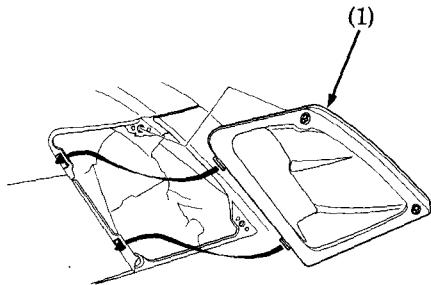

(1) Maintenance lid

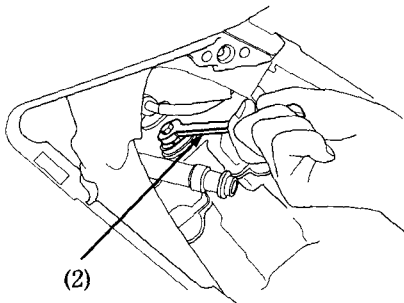

(2) Spark plug wrench