

## STOP/TAILLIGHT BULB REPLACEMENT

### ▲ WARNING

\* The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.


### CAUTION:

- \* Wear clean gloves while replacing the bulb.
- \* If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.

### NOTE:

- \* Be sure to turn the ignition switch OFF when replacing the bulb.

1. Remove both side covers (page 38) and seat (page 39).
2. Remove the two tail cowl mounting bolts (1) and the mounting rubbers (2).
3. Remove the tail cowl (4) by carefully prying up on the retaining tab (3).

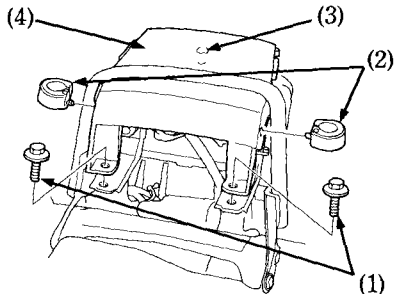

- |                   |                     |
|-------------------|---------------------|
| (1) Mounting bolt | (2) Mounting rubber |
| (3) Retaining tab | (4) Tail cowl       |