

FRONT/REAR TURN SIGNAL BULB REPLACEMENT

▲WARNING

* The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION:


* Wear clean gloves while replacing the bulb.

NOTE:

* Be sure to turn the ignition switch OFF when replacing the bulb.

1. Remove the lens from the turn signal by removing the screw (1).
2. Turn the socket (2) 90° in either direction, then pull it out toward you.
3. Slightly press in on the bulb (3) and turn in 90° counterclockwise. Remove the bulb.

Rear

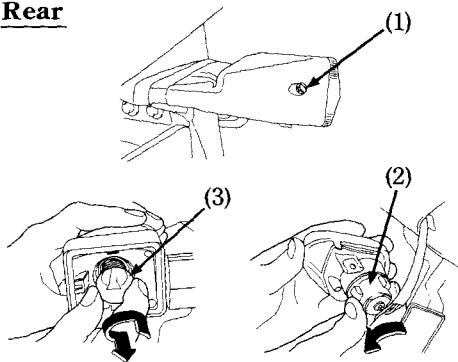

(1) Screw bolt
(3) Bulb

(2) Socket