

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the engine stop switch to *OFF* and push the choke lever forward to Fully *OFF* (B). Open the throttle fully and crank the engine for 5 seconds. Wait 10 seconds, then turn the engine stop switch to *RUN* and follow the Starting Procedure (page 48).