

## WHEEL REMOVAL


(Refer to the maintenance precautions on page 63 ).

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

#### CAUTION:

- \* To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

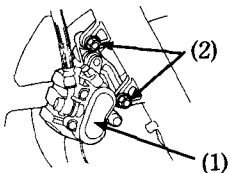


- (1) Brake caliper assembly  
(2) Fixing bolts

3. Disconnect the speedometer cable (3) from the speedometer gear box by removing the cable set screw (4).

#### NOTE:

- \* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

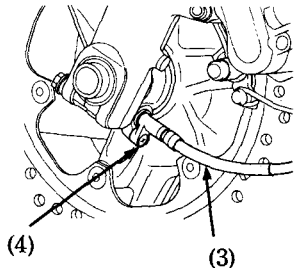

- (3) Speedometer cable  
(4) Cable set screw