


To replace any fuses in the fuse box (4) , remove the right upper shroud (5) by removing the screws (6). Then open the fuse box cover (7). Spare fuses (8) are located in the fuse box. Pull the old fuse out of the clips. Push a new fuse into the clips and install the fuse box cover. Tighten the screws. Install the upper shroud and tighten the screws.

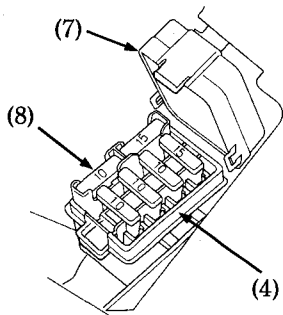


(4) Fuse box
(7) Fuse box cover

(8) Spare fuses

▲ WARNING

* **Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

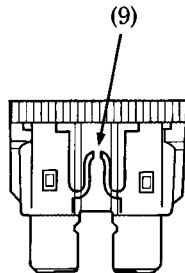

(9) Blown fuse