

<b>(Ref. No.) Description</b>	<b>Function</b>
(8) Neutral indicator (green)	Lights when the transmission is in neutral.
(9) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(10) Coolant temperature gauge	Shows coolant temperature (see page 12 ).
(11) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 47 ) is activated.
(12) Tripmeter	Shows mileage per trip.
(13) Tripmeter reset knob	Resets tripmeter to zero ( 0 ). Turn knob in direction shown.