


## Stop/Taillight Bulb

1. Remove both side covers (page 40) and seat (page 43).
2. Turn the socket (1) 90° counterclockwise, and remove it.
3. Slightly press down on the bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

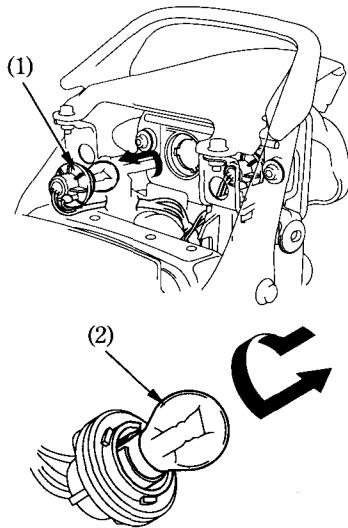

(1) Socket

(2) Bulb