

## CLEANING

Clean your motorcycle regularly to protect the surface finishes and inspect for damage, wear, and oil, coolant or brake fluid leakage.

### CAUTION:


**\* High pressure water (or air) can damage certain parts of the motorcycle.**

Avoid spraying high pressure water (typical in coin-operated car washes) at the following areas:

- Wheel Hubs
- Ignition Switch
- Carburetors
- Brake Master Cylinders
- Instruments
- Handlebar Switches
- Muffler Outlet
- Under Fuel Tank
- Drive Chain
- Under Seat
- Left Side Cover
- Air Vent Pipe
- Air Intake

### NOTE:

**\* Do not apply the pressured water directly to the air vent pipe and/or the air intake. The water can be drawn into the carburetor and/or enter the air cleaner.**

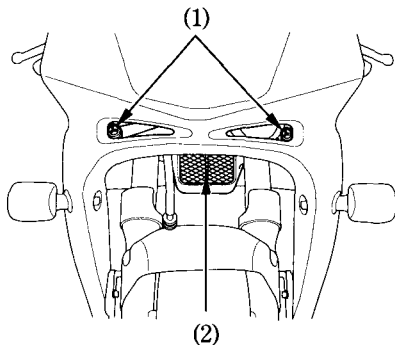

- (1) Air vent pipe
- (2) Air intake