

## Fuel Tank

The fuel tank capacity including the reserve supply is:

18.0 ℓ (4.76 US gal , 3.96 Imp gal)

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The fuel fill cap is hinged and will lift up.

After refueling, to close the fuel fill cap, push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

### Except MX, U, BR type

Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

### For MX type only


Use unleaded or low-lead petrol with a research octane number of 88 or higher. Recommend – Extra petrol.

### For U, BR type

Use unleaded petrol with a research octane number of 91 or higher.

### CAUTION:

**\* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.**

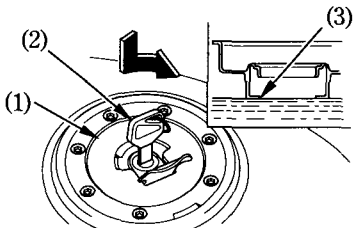

- (1) Fuel fill cap  
(2) Ignition key

- (3) Filler neck