



5. Move the radiator (5) out of the way and remove the grommet (6) from the hook (7).
6. Pull the radiator toward the front.

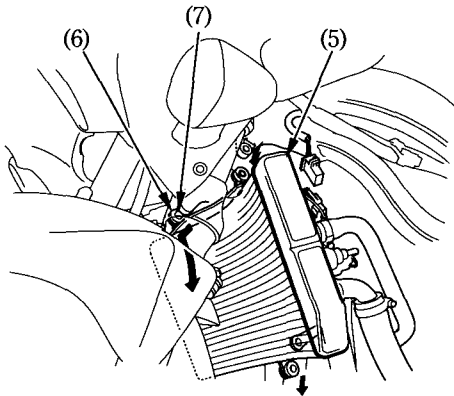

- (5) Radiator
(6) Grommet
(7) Hook

7. Disconnect the ignition coil connectors (8).
8. Disconnect the ignition coils (9) from the spark plugs.

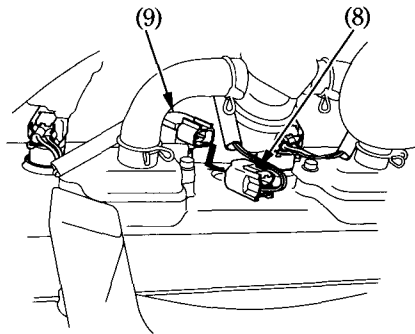

- (8) Ignition coil connectors
(9) Ignition coils