


Coolant Temperature Meter

The coolant temperature meter (1) shows coolant temperature digitally.

Temperature Display:

| | |
|------------------------|--|
| Below 34°C | “— —” is displayed. |
| Between 35°C and 130°C | Actual coolant temperature is indicated. |
| Above 130°C | The display will remain and flash “130°C”. |

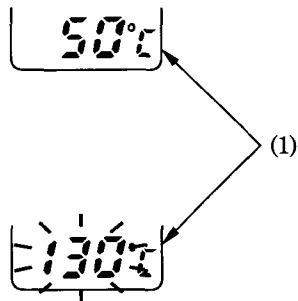

(1) Coolant temperature meter