


1. Remove the lower cowl (page 68 ) and middle cowls (page 69 ).
2. Remove the radiator lower mount nut (1) and radiator lower mount bolt (2).
3. To access the radiator upper mount bolt (3), remove the wire band (4).
4. Remove the radiator upper mount bolt.
5. Remove the clips (5).

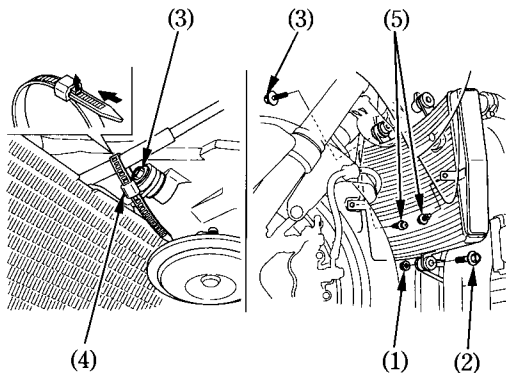

- (1) Radiator lower mount nut
- (2) Radiator lower mount bolt
- (3) Radiator upper mount bolt
- (4) Wire band
- (5) Clips