

Main Fuse:

The main fuse (1) is located under the front seat.

The specified fuse is:

30 A

1. Remove the front seat (page 63).
2. Disconnect the wire connector (2) of the starter magnetic switch (3).
3. Pull out the old fuse and install a new fuse. The spare main fuse (4) is located behind the starter magnetic switch.
4. Reconnect the connector and install the front seat.


FI Fuse:

The FI fuse (5) is located under the front seat.

The specified fuse is:

20 A

1. Remove the front seat (page 63).
2. Open the FI fuse box cover (6).
3. Pull out the old fuse and install a new fuse. The spare fuse is located in the fuse box (page 129).
4. Close the FI fuse box cover and install the front seat.

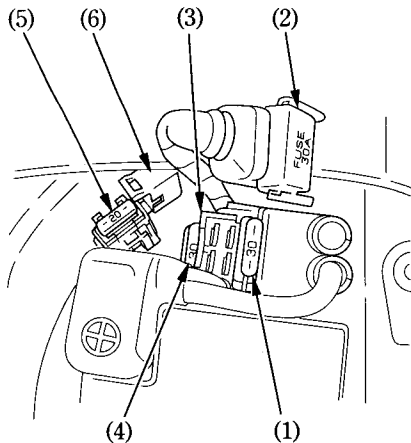

- (1) Main fuse
- (2) Wire connector
- (3) Starter magnetic switch
- (4) Spare main fuse
- (5) FI fuse
- (6) FI fuse box cover