



(Ref.No.) Description	Function
(8) HESD indicator (red)	<p>Lights when there is any abnormality in the HESD (Honda Electronic Steering Damper). Should also go on for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at  (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible (page 61).</p>
(9) PGM-FI malfunction indicator lamp (MIL) (red)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at  (RUN). If the indicator comes on at any other time, reduce speed and take the motorcycle to a Honda dealer as soon as possible.</p>