

REMOVAL FROM STORAGE

- 1. Uncover and clean the motorcycle.**
- 2. Change the engine oil if more than 4 months have passed since the start of storage.**
- 3. Charge the battery as required. Install the battery.**
- 4. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.**
- 5. Perform all Pre-ride Inspection checks (page 71).**
Test ride the motorcycle at low speeds in a safe riding area away from traffic.