

Brakes ▶ Adjusting the Brakelight Switch

Adjusting the Brakelight Switch

Maintenance

Check the operation of the brakelight switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

