


Electrical Trouble ▶ Burned-out Light Bulb

Headlight Bulb

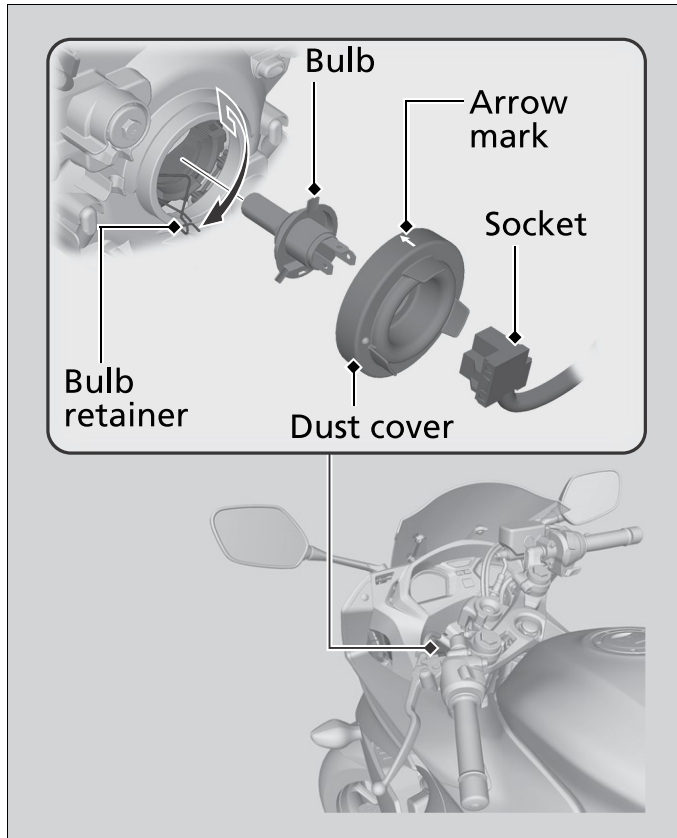

1. Pull the socket off the bulb without turning it.
2. Remove the dust cover.
3. Unhook the bulb retainer and pull out the bulb without turning it.
4. Install a new bulb and parts in the reverse order of removal.
 - ▶ Install the dust cover with its arrow mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.