

| <b>(Ref. No.) Description</b>        | <b>Function</b>  |
|--------------------------------------|--|
| (1) Speedometer                      | Shows riding speed.  |
| (2) Odometer                         | Shows accumulated mileage.   |
| (3) Oil pressure warning light (red) | <p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>CAUTION:</b></p> <p>* <b>Running the engine with insufficient oil pressure may cause serious engine damage.</b></p> |
| (4) Turn signal indicator (green)    | Flashes when the turn signal operates.   |
| (5) Tachometer                       | Shows engine rpm.  |
| (6) Tachometer red zone              | <p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p>* <b>Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b></p>   |