


## Rear seat

To open the rear seat (4) , insert the ignition key (5) into the seat lock (4) and turn it clockwise.

Pull the seat back and up.

To close the rear seat , push down on the rear of the seat.

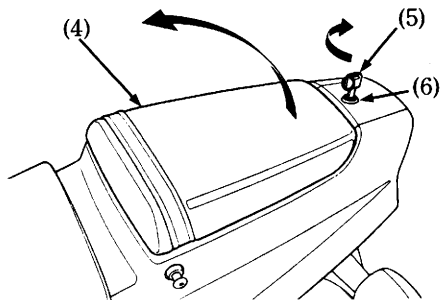

(4) Rear seat

(5) Ignition key

(6) Seat lock