

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								Refer to pages
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
				6	12	18	24	30	36		
			EVERY 1,000 km (600 mi) I, L								74-78
DRIVE CHAIN					I		I		I	79	
DRIVE CHAIN SLIDER					I		I		I	79	
BRAKE FLUID		NOTE (3)			I	I	R	I	I	R	18-21
BRAKE PAD WEAR					I	I	I	I	I	I	89
BRAKE SYSTEM					I		I		I	18-21	
* BRAKE LIGHT SWITCH						I		I		I	-
* HEADLIGHT AIM							I		I		-
CLUTCH SYSTEM					I	I	I	I	I	I	22-23
SIDE STAND						I		I		I	81
* SUSPENSION						I		I		I	80
* NUTS, BOLTS, FASTENERS					I		I		I		-
** WHEELS/ TYRES							I		I		-
** STEERING HEAD BEARINGS					I		I		I		-

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

- NOTES:
- (1) At higher odometer readings, repeat at the frequency interval established here.
 - (2) Service more frequently when riding in unusually wet or dusty areas.
 - (3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
 - (4) Switzerland and Austria type only.