


## WHEEL REMOVAL

(Refer to the maintenance precautions on page 65 ).

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.

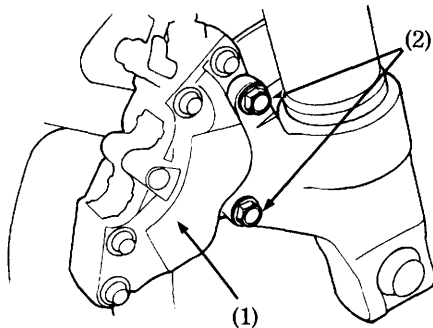


- (1) Brake caliper assembly  
(2) Fixing bolts

2. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

### CAUTION:

- \* To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

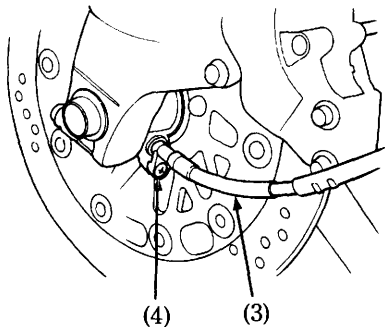

- (3) Speedometer cable  
(4) Cable set screw