


### Rear seat

To open the rear seat (4), insert the ignition key (5) into the seat lock (6). Hold the rear of the seat, then turn the ignition key clockwise and open the rear seat.

To close the rear seat, push down on the rear of the seat.

Be sure the seat is locked securely in position after installation.

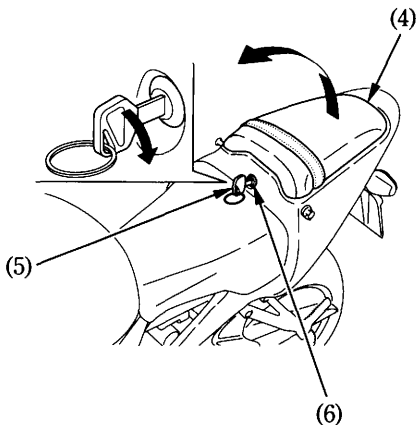

- (4) Rear seat
- (5) Ignition key
- (6) Seat lock