Front/Rear Turn Signal Bulb

- 1. Remove the turn signal lens from the turn signal by removing the screw (1).
- 2. Turn the socket (2) 90° in either direction, then pull it out toward you.
- 3. Slightly press in on the bulb (3) and turn in 90° counterclockwise. Remove the bulb.
- 4. Install a new bulb in the reverse order of removal.





