


LOWER FAIRING

Removal:

1. Remove the middle fairing. (page 47)
2. Remove the bolts (4).
3. Remove the lower fairing (5).

Installation:

1. Installation can be done in the reverse order of removal.
 - Run the tubes through the clip of the lower fairing.

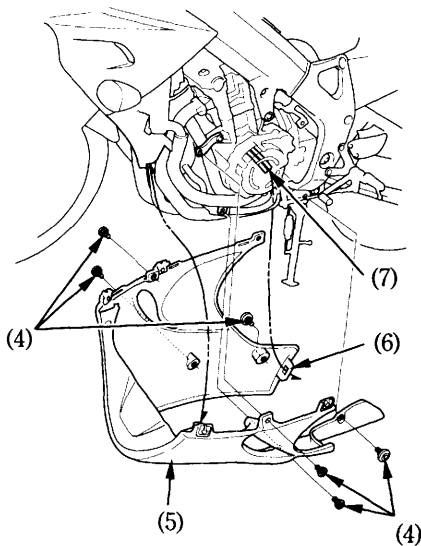

(4) Bolts
(5) Lower fairing

(6) Clip
(7) Tube