

| Ref. No. | Description | Function |
|----------|-------------------------------------|--|
| 1 | Speedometer | Shows riding speed. |
| 2 | Odometer | Shows accumulated mileage. |
| 3 | Left turn signal indicator (amber) | Flashes when the left turn signal operates. |
| 4 | Right turn signal indicator (amber) | Flashes when the right turn signal operates. |
| 5 | Tachometer | Shows engine rpm. |
| 6 | Tachometer red zone | <p>Never allow the tachometer needle to enter the red zone, even after the engine has been broke in.</p> <p>CAUTION</p> <p>* The red zone indicates the maximum limits of engine speed and running the engine in the red zone may adversely affect its service life.</p> |
| 7 | Low oil pressure indicator (red) | <p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p> |