

Make free play adjustments by turning the adjusting nut (4) at the brake arm.


NOTE:

- * Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final free play adjustment.
- * If proper adjustment cannot be obtained by this method, see your Honda dealer.

4. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

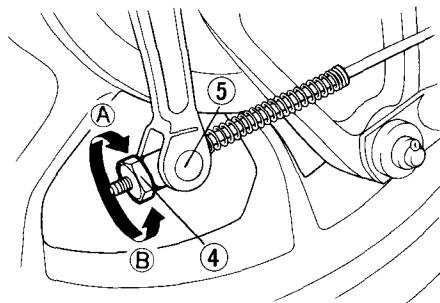

(4) Adjusting nut
(5) Arm pin

(A) Decrease free play
(B) Increase free play