

Fuel Tank

The fuel tank capacity, including reserve, is:


20.5 l (5.4 US gal, 4.5 Imp gal)

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The cap is hinged and will lift up.

Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

CAUTION:

* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

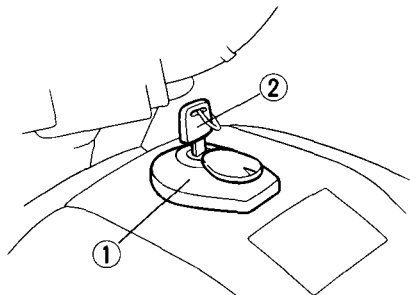

(1) Fuel fill cap

(2) Ignition key