


# ESSENTIAL INDIVIDUAL COMPONENTS

## IGNITION SWITCH

The ignition switch (1) is located at the bottom of the indicator panel.

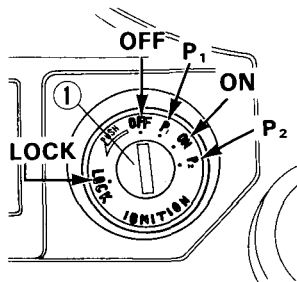

(1) Ignition switch