


ROTARY BEAM

The height of the rotary beam (1) can be adjusted by loosening the lock grip (2). When the rotary beam is extended with the ignition switch in the "P1" or "P2" position, it is lighted and turned. When the rotary beam is fully retracted, the beam is turned off. An alarm buzzer sounds when the rotary beam remains extended or the lock grip is loosened with the ignition switch "ON" or while riding.

▲ WARNING

- * **Never ride with the rotary beam extended or the lock grip loosened.**
- * **Tighten the lock grip securely after the rotary beam has been adjusted.**

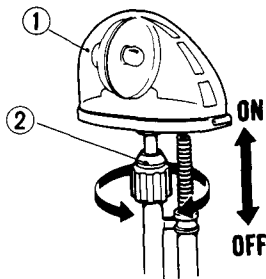

- (1) Rotary beam
- (2) Lock grip