

Engine Oil and Filter


Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 52).

NOTE:

- * Change the engine oil with the engine at normal operating temperature and the motorcycle on its center stand to assure complete and rapid draining.

CAUTION:

- * To prevent oil leaks and filter

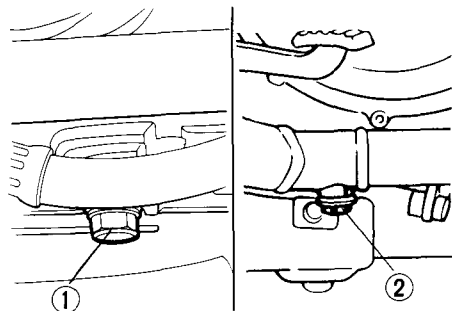

(1) Engine bottom oil drain plug (2) Frame oil drain plug


60

damage, never support the engine on the oil filter.

1. Remove the under cowl by removing the fixing bolts.
2. To drain the oil, remove the oil filler cap, engine bottom oil drain plug (1) and right and left frame oil drain plugs (2).

⚠ WARNING

- * A warmed-up engine and the oil in it are hot; be careful not to burn yourself.
3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

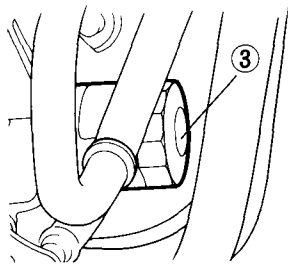

(3) Oil filter