


To replace fuses in the fuse box, remove the fuse box cover. Pull the old fuse out of the clips; or slide it lengthwise until one end comes out, then lift it out with your fingers. Push a new fuse into the clips and install the fuse box cover.

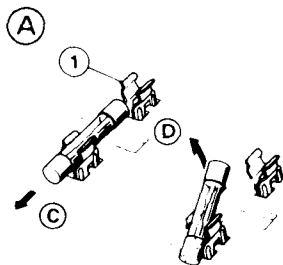


(1) Fuse holder
(C) Slide

(D) Remove

▲ WARNING

* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

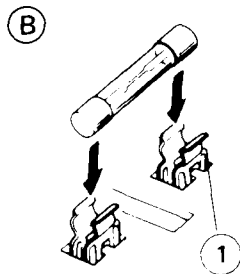

(1) Fuse holder