

## Coolant


---

2. Open the seat (page 26).
3. With the engine at normal operating temperature, check the coolant level in the reserve tank ( 1 ). It should be between the UPPER ( 2 ) and LOWER ( 3 ) level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

4. Remove the maintenance lid (page 85 ).
5. Remove the reserve tank cap ( 4 ).  
Always add coolant to the reserve tank.  
Do not attempt to add coolant by removing the radiator cap.

### UNDER SEAT

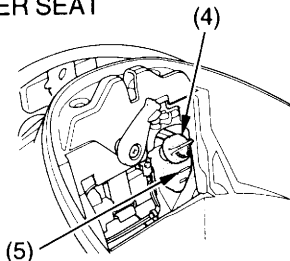

- (4) reserve tank cap
  - (5) UPPER level mark
6. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
  7. Reinstall the reserve tank cap and maintenance lid.
  8. Lower and push down on the seat until it locks.