


Rear Wheel Removal


1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Remove the rear brake adjuster (1).
3. Press and release the rear brake pedal and disconnect the brake rod (2) from the brake arm (3).
4. Loosen the adjusting nut (4) on the chain adjuster on both sides.

5. Remove the axle nut (5) and pull out the axle. Push the wheel forward and derail the drive chain from the rear sprocket. Remove the wheel.

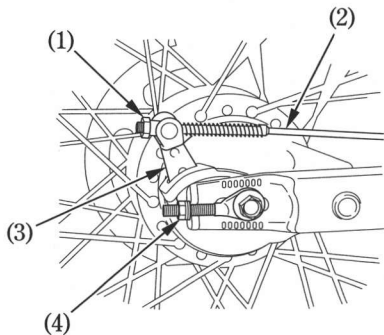

- (1) Brake adjuster
(2) Brake rod

- (3) Brake arm
(4) Adjusting nut

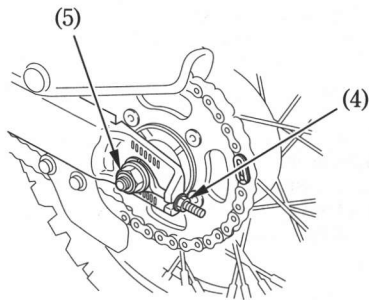

- (5) Axle nut